



"Start to move" device installation instructions for VOLVO cars

Required equipment for installation of the device:

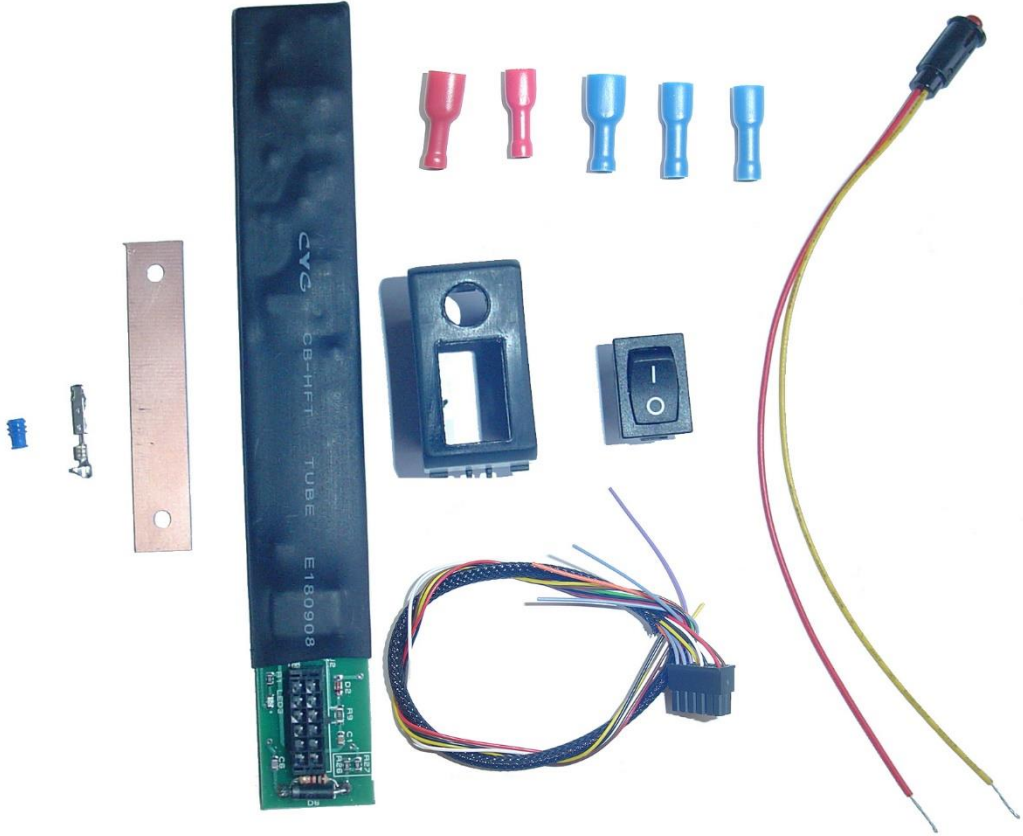

Still need 11 meters of one one-wire and 2-meter two-wire cable.


1 step. Find a pneumatic valve which is shown in the photo below:

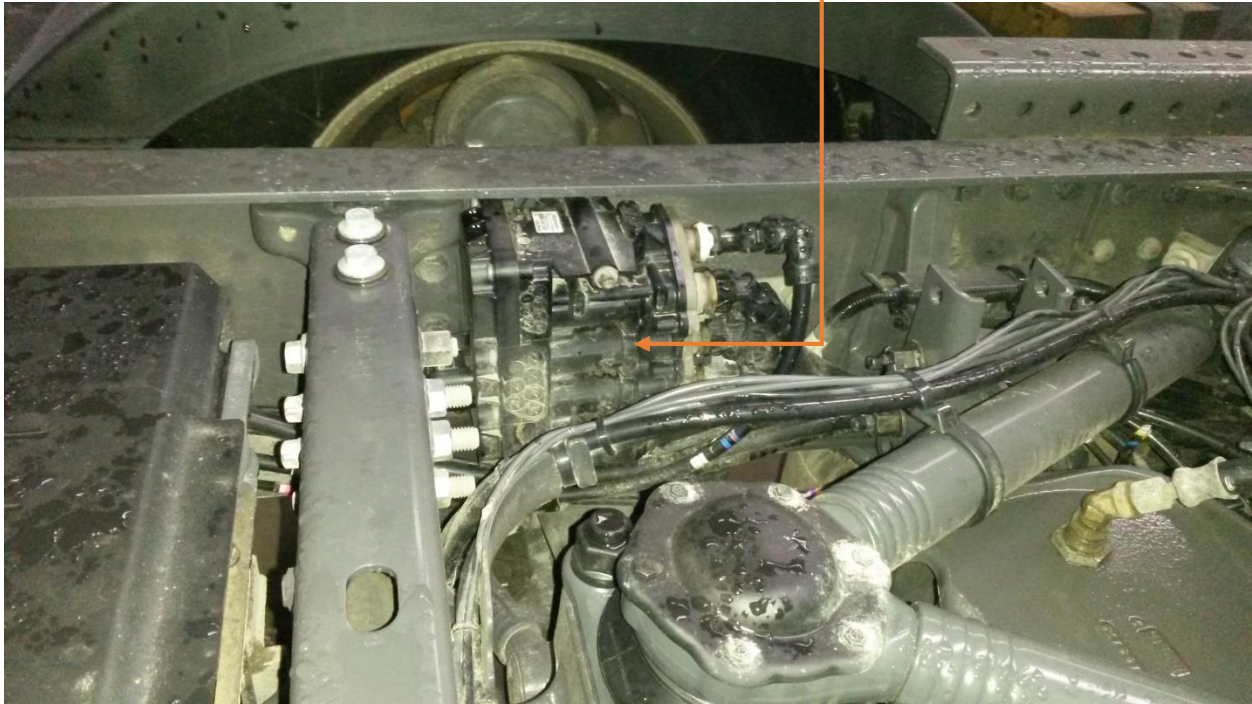

2 step. Unscrew the valve from the frame, disconnect the connector and remove the cover. The valve does not need to be fully removed.




3 step. Solder cables to the connector pin. Take off the resistance indicated by the arrow and in that place we solder white wire. Pay attention to the white wire soldered area!!!!

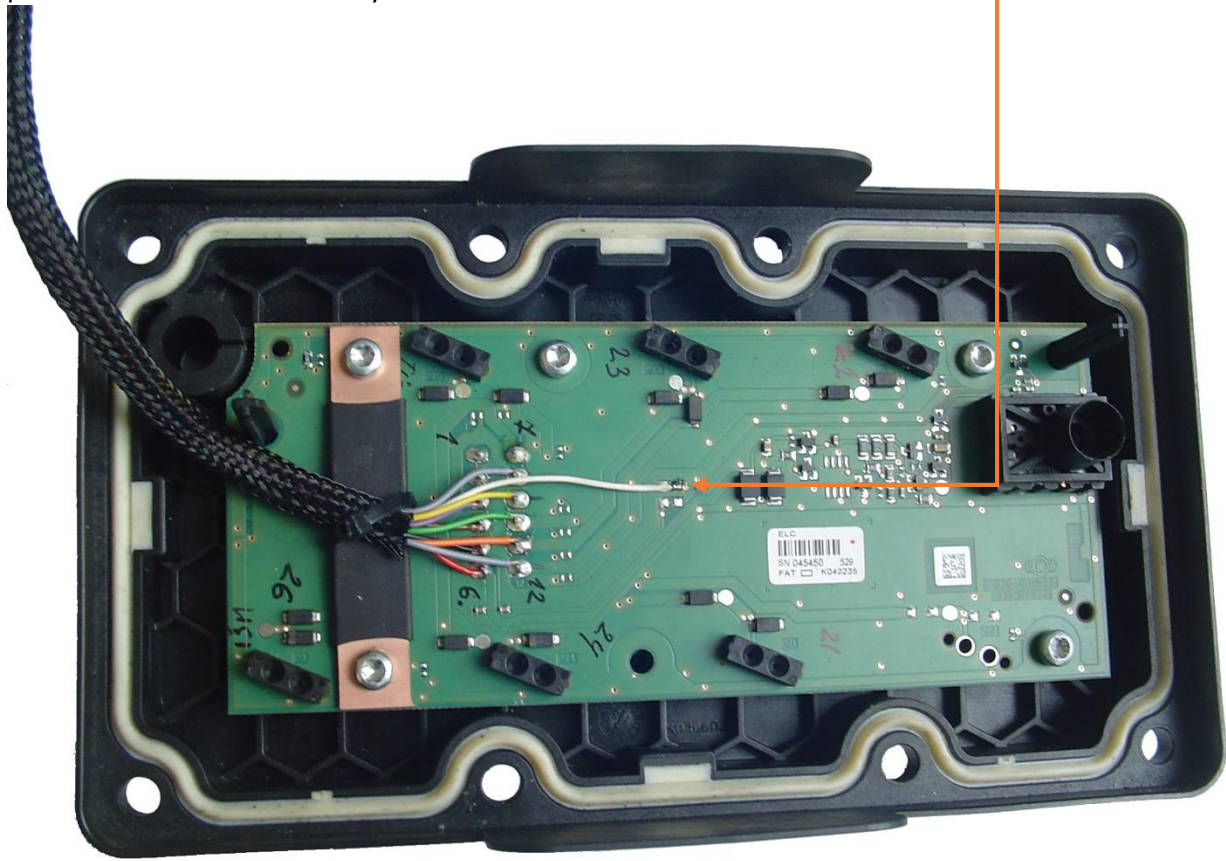

Solder wires in the following order:

Wire color	The valve connector contact number
Violet	3
Brown	4
Black	5
Red	6
Grey	8
Yellow	9
Green	10
Orange	11
Grey	12
White	To the resistance contact


4 step. Mounting the device below the cap between the valves:

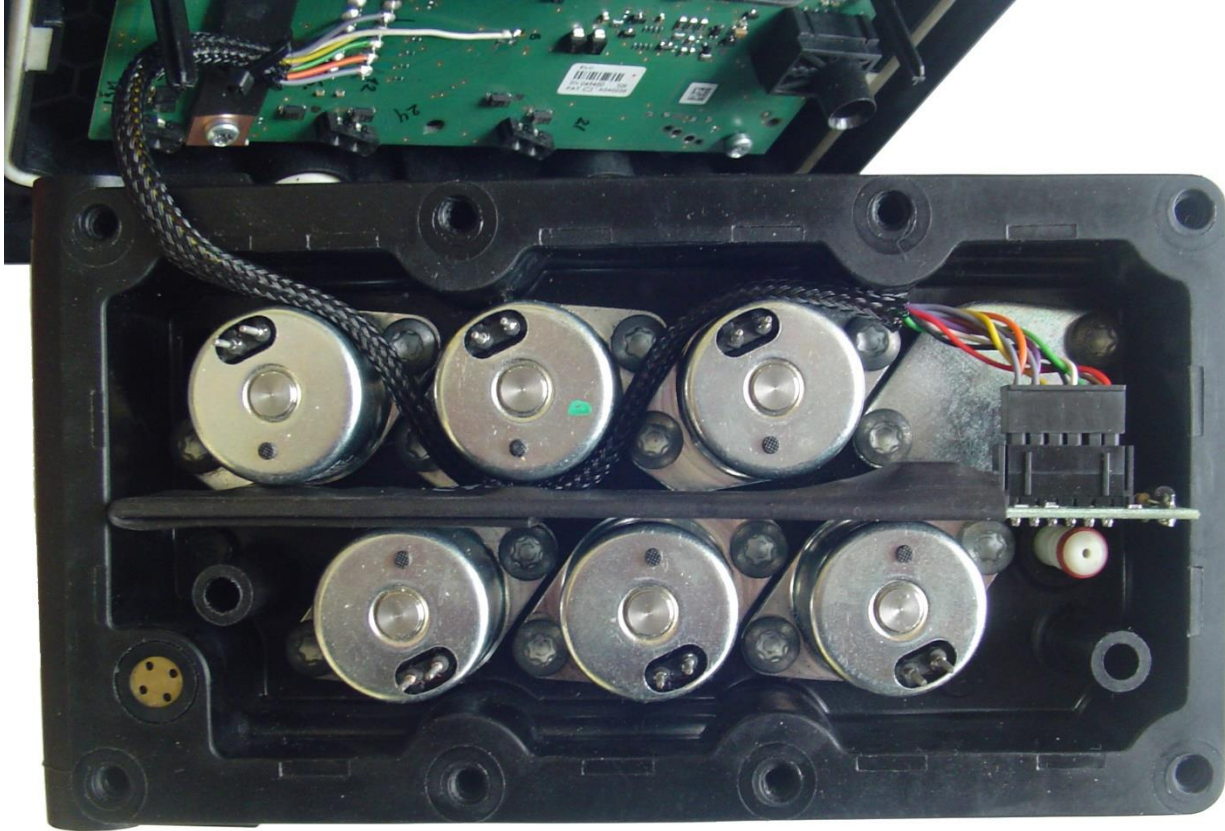


5 step. From the connector, which has one free place for contact, towing a one-wire cable to the cab (11 meters):




6 step. The cab connect the switch and LED:

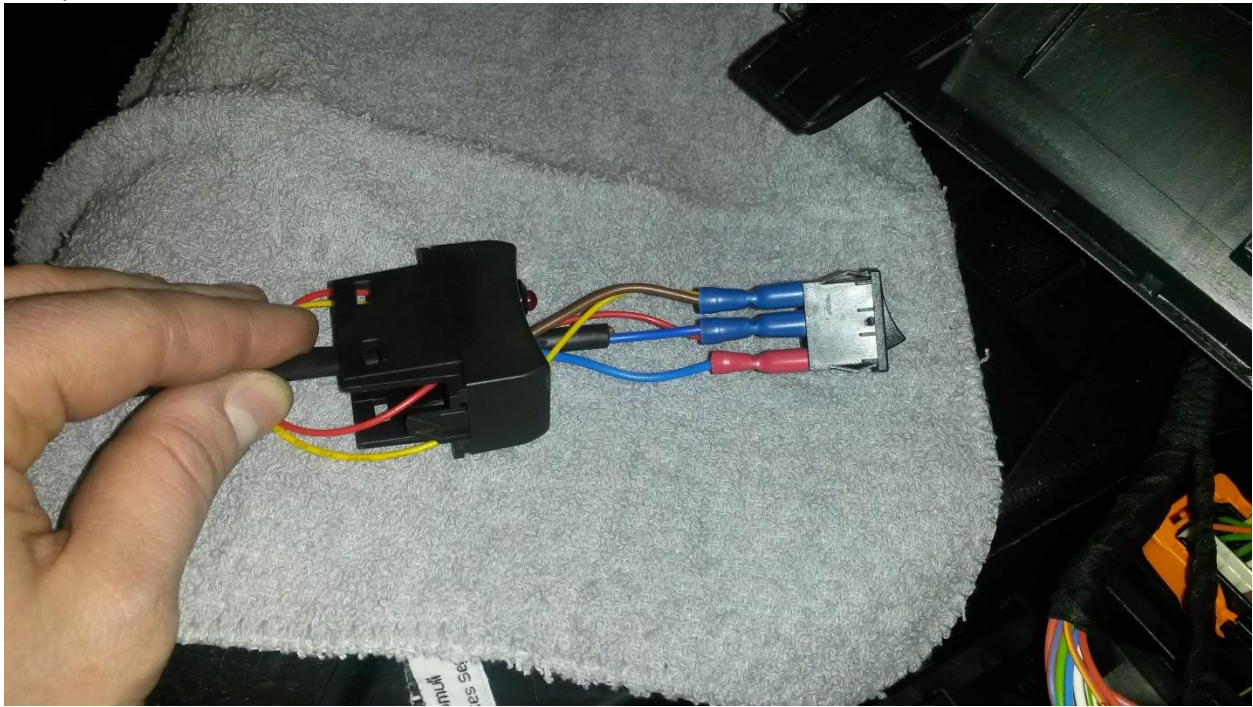

Switch and LEDs connect according to the following scheme:

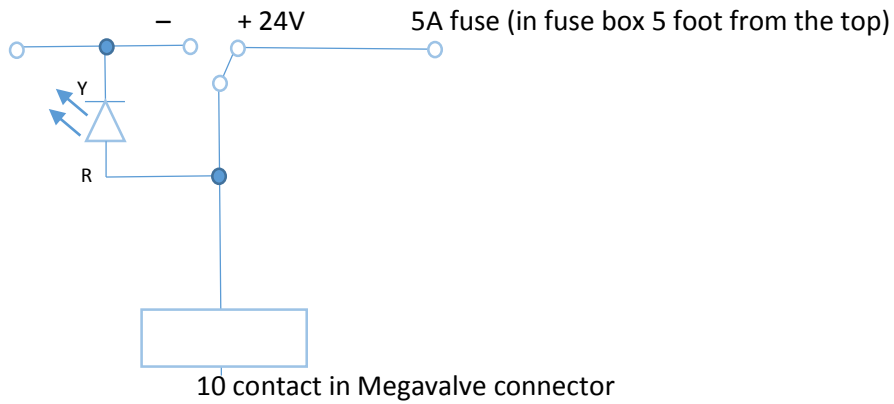

Power supply (+ 24V (constant)) and minus bring from fuse box:

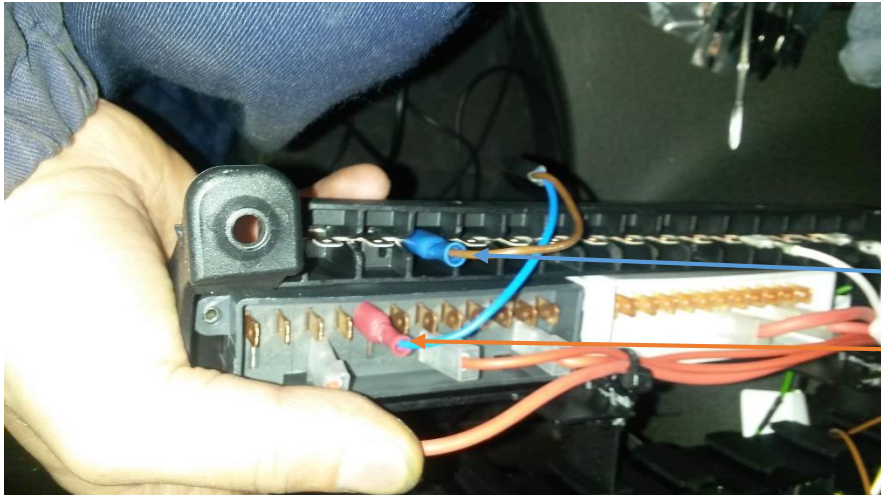

The minus wire

Plus wire (+ 24V)